



Update Network card driver to 12.19.2.50


1. Visit <https://www.driverscloud.com/en/services/GetInformationDriver/75542-0/intel-lan-win10-win11-1219250zip>
2. Download the driver from DriversCloud:

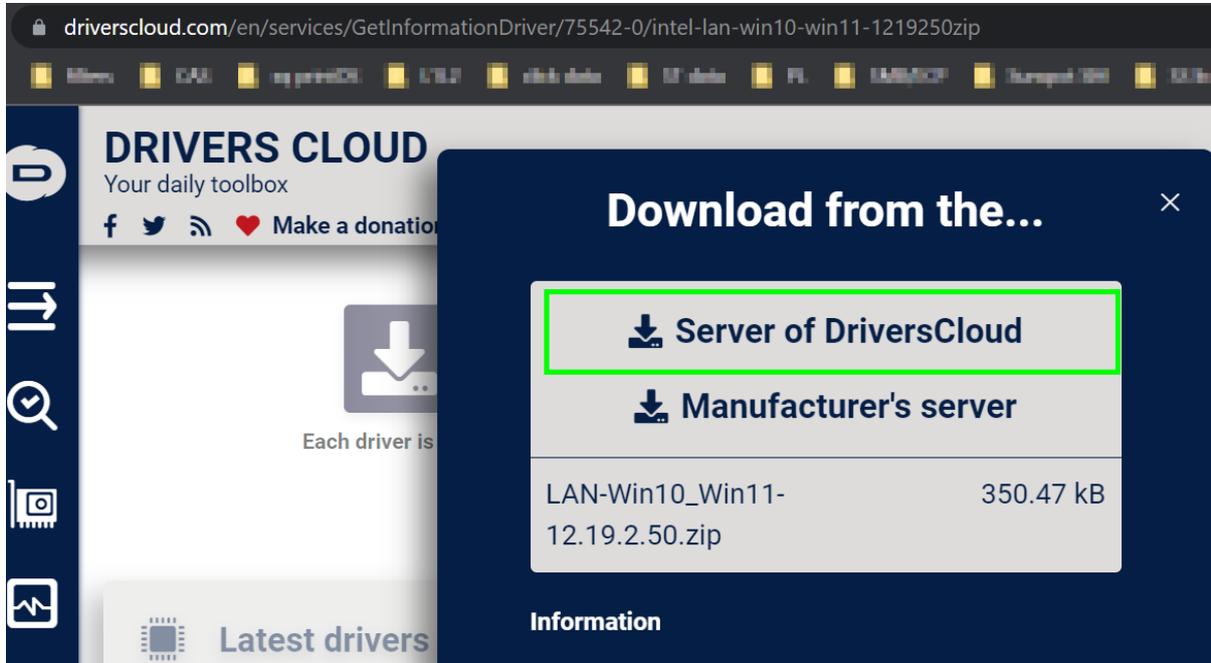


3. Extract the zip content in your preferred folder.
4. Search for device manager in the windows search bar.

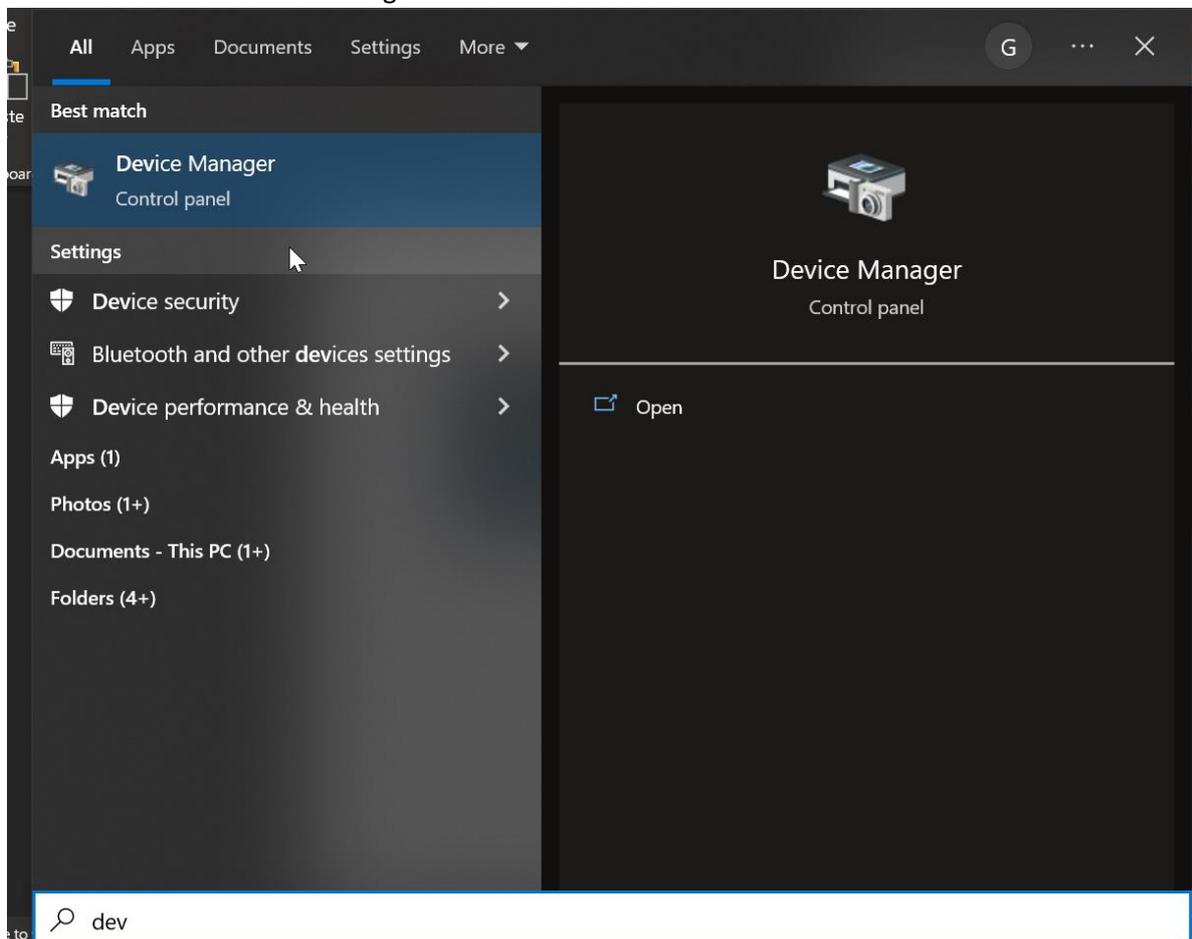

5. Find your Ethernet network adapter.

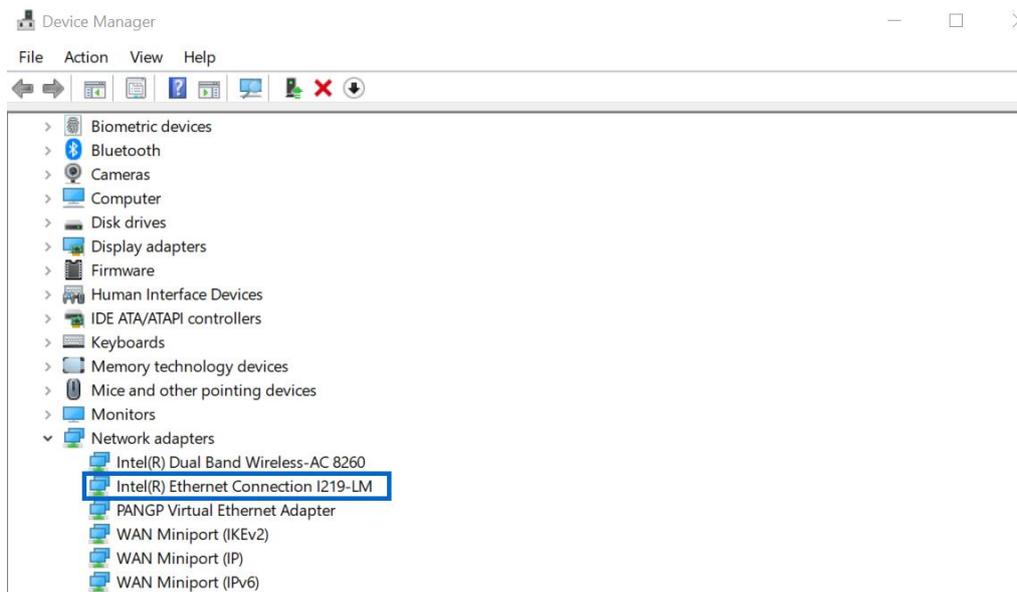

6. In the properties, click on driver tab and click on Update Driver:

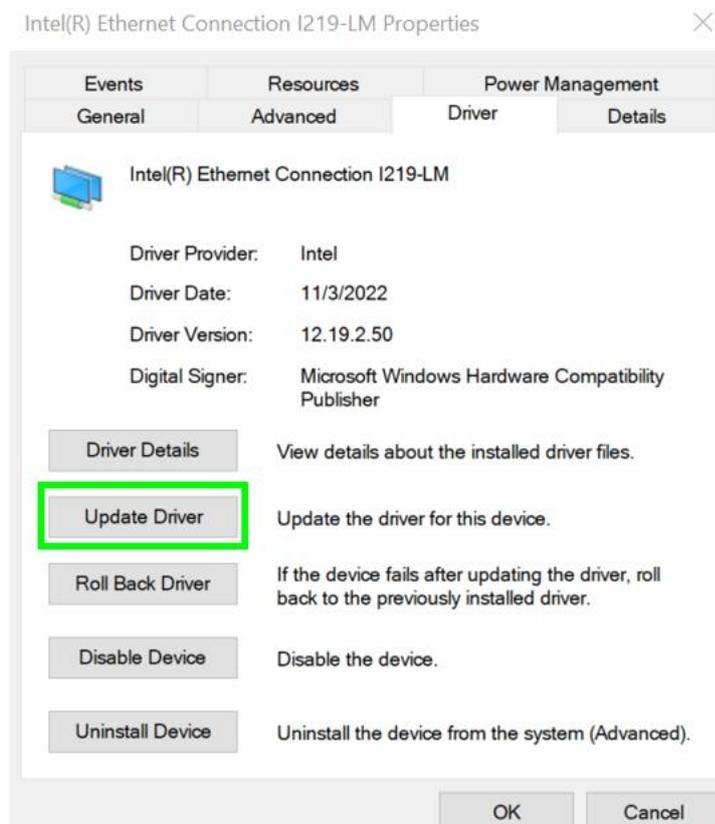

7. Select the folder that has the content of the zip file:

How do you want to search for drivers?

→ Search automatically for drivers

Windows will search your computer for the best available driver and install it on your device.

→ Browse my computer for drivers

Locate and install a driver manually.

8. Make sure that the update has been successful:

Intel(R) Ethernet Connection I219-LM Properties

The screenshot shows the 'Driver' tab of the 'Intel(R) Ethernet Connection I219-LM Properties' dialog box. The 'Driver Version' is highlighted with a blue box and is 12.19.2.50. Below the driver information are several buttons: 'Driver Details', 'Update Driver', 'Roll Back Driver', 'Disable Device', and 'Uninstall Device', each with a corresponding description.

Events	Resources	Power Management
General	Advanced	Driver

Intel(R) Ethernet Connection I219-LM

Driver Provider: Intel

Driver Date: 11/3/2022

Driver Version: 12.19.2.50

Digital Signer: Microsoft Windows Hardware Compatibility Publisher

Driver Details View details about the installed driver files.

Update Driver Update the driver for this device.

Roll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.

Disable Device Disable the device.

Uninstall Device Uninstall the device from the system (Advanced).