

Klemmleiste =A1+E1-X2

Ziel					Klemmen-Nr.	Ziel
intern						extern
=Anlage+Ort-BMK:Anschl		Querverweis	Brücke	Zusatz		=Anlage+Ort-BMK:Anschl
-X1:1	1.4				1A	-K1:1
-Q3:2	2.2				1B	-M1:U
-X1:7	1.6				2A	-K2:1
-X1:2	1.6				2B	-K2:3
-X1:7	1.4				3A	-K1:5
-X1:3	1.6				3B	-K2:5
	.				4A	
					4R	

nung